


## Product comparison : Koru CAM versus Konica HRC-100

System Features Octagon

Based on Agfa RPS 2024 test

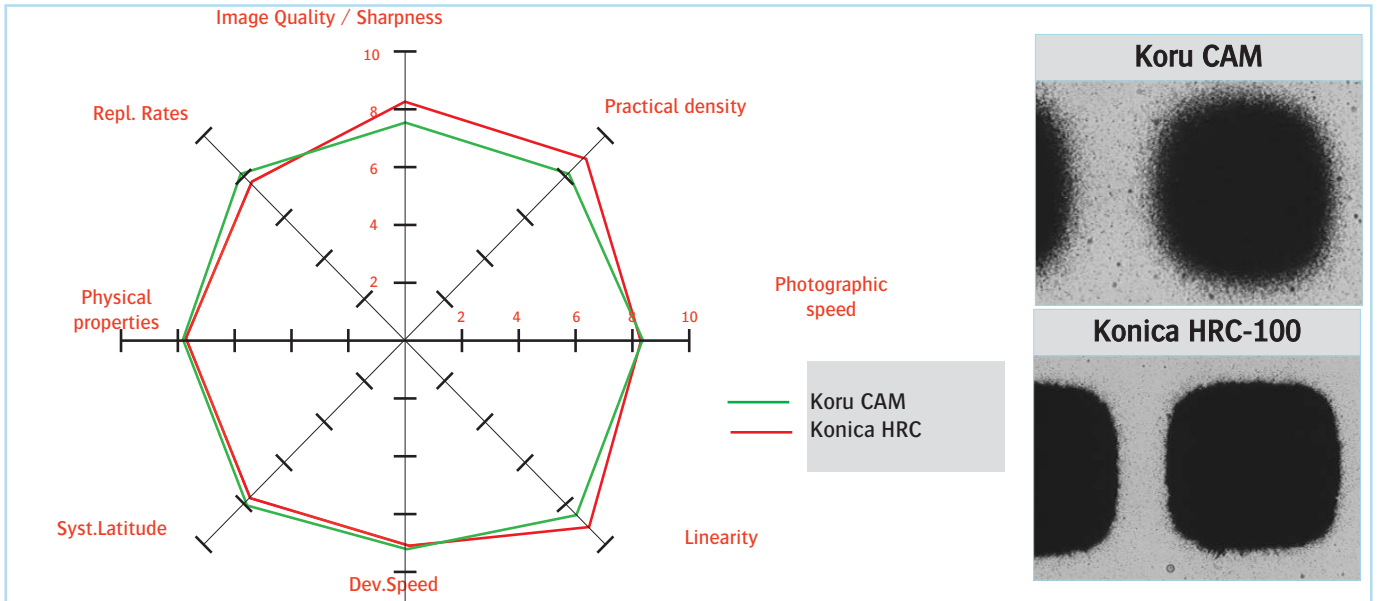


### Review + implementation


- **Camera / drop-in for :**
  - ◆ **exposure set-up**
- ◆ **Adjustment for :**
  - ◆ **processing set-up :** developing possible at 25s
  - ◆ **calibration set-up :** needs to be adjusted.

### Product Colors

**CAM**

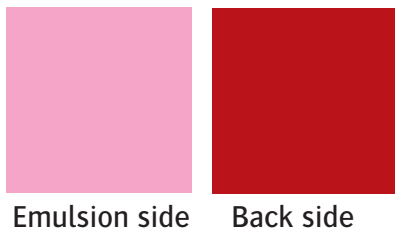

**HRC**

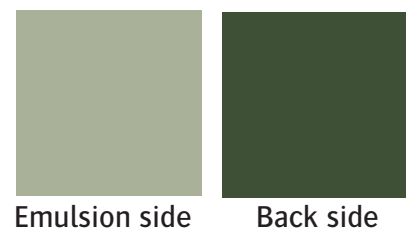

Practical Photographic Properties					
Type	Exp.time(s)(F11)	D.Max.	D.Min	Grad. Toe	Grad
<b>Koru CAM</b>	<b>5.5</b>	4.20-4.40	0.04	2.5	8
<b>Konica OR-3</b>	<b>5.5</b>	4.70-4.90	0.04	5	15

Note: - Koru CAM processed in Koru KF dev. - Konica HRC processed in Konica Tetrastige CDM751(1+1)  
 - Before switching over to Koru KF developer cleansing with Koru Chemical Cleaner is obligatory.