


Product comparison : Koru CAM versus Fuji HCL

System Features Octagon

Based on Agfa RPS 2024 test

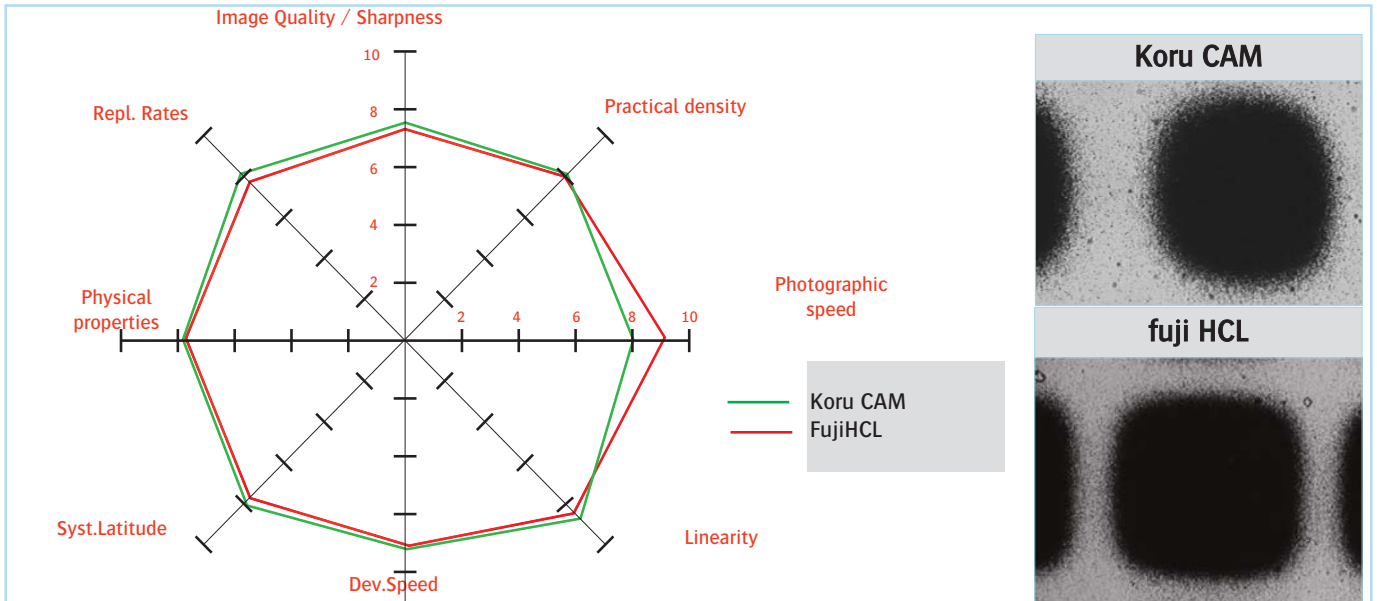


Review + implementation


- **Camera / drop-in for :**
 - ◆ processing set-up
 - ◆ calibration set-up
- **Adjustment for :**
 - ◆ **exposure set-up** :output a practical test exposure.
: based on a practical density of 4.20 an increase in exp. of +-140% is needed.

Product Colors

CAM

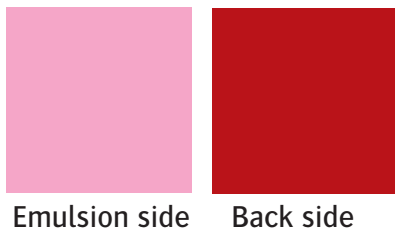

HCL

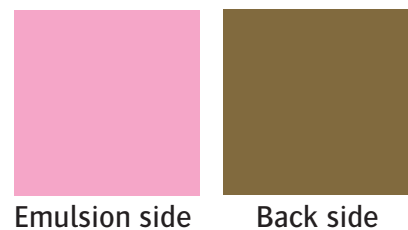

Practical Photographic Properties					
Type	Exp.time(s)(F22)	D.Max.	D.Min	Grad. Toe	Grad
Koru CAM	22	4.20-4.40	0.04	2.5	8
Fuji HRL	9	4.10-4.30	0.04	2.25	6

Note: - Koru CAM processed in Koru KF dev. - Fuji HCL processed in Fuji QR-D1
- Before switching over to Koru KF developer a cleansing with Koru Chemical Cleaner is obligatory.