


## Product comparison : Koru CON versus Fuji FKN

System Features Octagon

Based on Agfa CDL2002Ri test

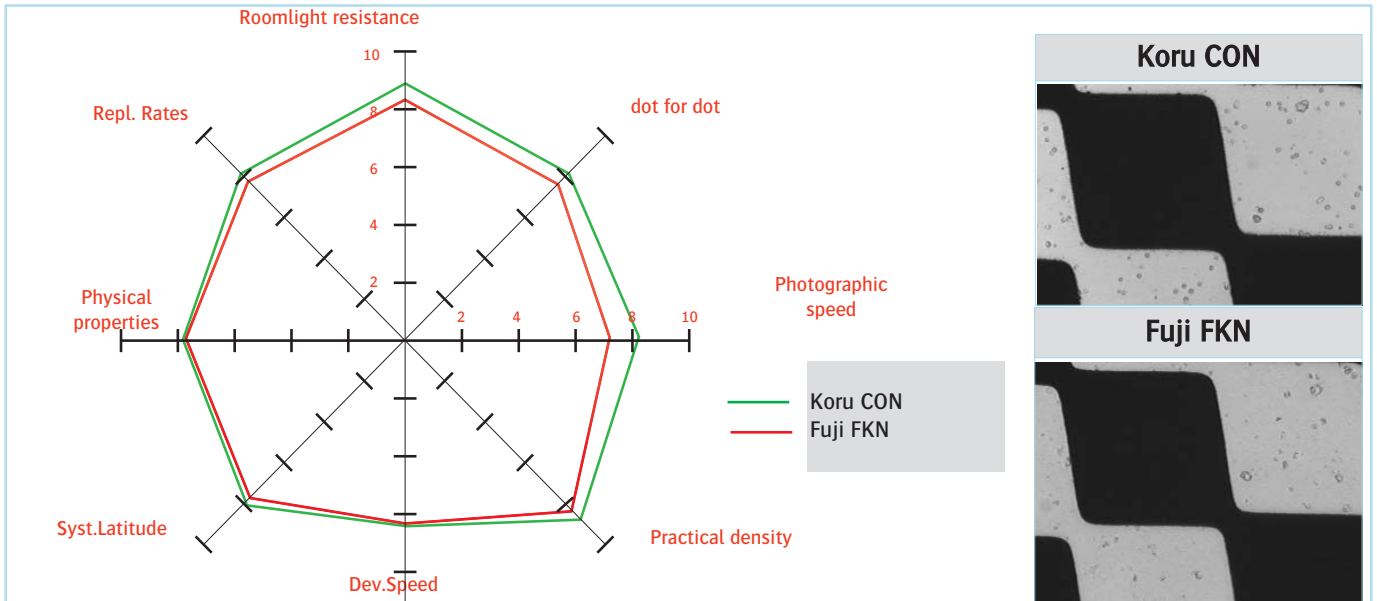

### Review + implementation

● **Contact / drop-in for :**

- ◆ processing set-up
- ◆ spread and choke

**Adjustment for :**

- ◆ **exposure set-up:** output a practical test exposure.  
: based on a practical density of 4.20 an decline in exp. of +25% is needed.

### Product Colors


#### CON



Emulsion side

Back side

#### FKN

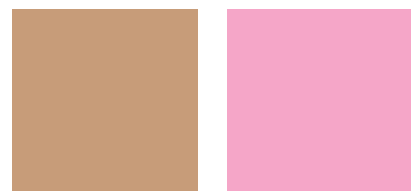

Emulsion side

Back side

### Practical Photographic Properties

Property	Koru CON		Fuji FKN	
	optimum exp.	Over-exposure	optimum exp.	Over-exposure
<b>Exp. Time</b>	45	90	65	145
<b>Practical density</b>	D.4.20	D.4.80	D.4.10	D.4.70
<b>5%</b>	5%	5.8%	5%	6%
<b>50%</b>	51.4%	53%	51.7%	54

Note: - Koru CON processed in Koru KF dev. - Fuji FKN processed in Fuji QR-D1  
- Before switching over to Koru KF developer a cleansing with Koru Chemical Cleaner is obligatory.